



Thank You for Your **LUXSENSE SUPPORT!**

GETTING STARTED IS QUICK AND EASY — JUST FOLLOW THESE TWO STEPS:

I. DOWNLOAD THE LUXSENSE APP

📲 Scan one of the QR codes below to download the app or search for our app within your app store:



IOS



ANDROID

Once installed, open the app and:

1. Accept all requested permissions
2. Enter your **Registration ID** (provided with your order)
3. You'll then be taken to the main menu

II. POWER ON AND PAIR YOUR LUXSENSE SENSOR

🔌 Plug in the power adapter; the display will step through startup messages:

- “Powering up ...”
- “Sensor: [device type]”
- “LuxSense Version [x.x.x]”
- “LuxSense Device ID [Lux..]”
- “LuxSense Device Name [Name Your Sensor]”
- “Sensor can now connect to your LuxSense app”

Then, in the LuxSense app:

1. Go to Settings menu option
2. Follow the in-app instructions to pair your sensor
3. New sensors will appear as UNASSIGNED in your list
4. You'll need your valid WiFi credentials to complete setup

📞 If you need help at any point, our team is here for you.
support@luxsense.tech



LuxSense ChronoChime –

A modern homage to the timeless elegance of the grandfather clock

ChronoChime does the unthinkable – it let's you know when it's the top of an hour.

A perfect time to reflect on the passing of time, the goals achieved, and the goals YET TO BE achieved.

And while you are at it – pay attention to the seemingly out of place 'word or phrase' attached to each notice. And solve the mystery before ChronoChime solves it for you later in the day.

LuxSense ChronoChime notifications can often be modified within the settings option of your phone operating system.

Notifications begin at 8:00 am and the last notification celebrates the 7:00 pm hour.
