



Thank You for Choosing **WINESENTRY**

Designed by wine collectors, for wine collectors who value confidence in their cellar.

GETTING STARTED IS SIMPLE. YOUR SYSTEM INCLUDES TWO COMPONENTS:



WineSentry Sensor



WineSentry Display

Both components require a USB-C power supply. Power supplies and cables are not included, because every cellar is different and cable length needs vary depending on where you place your Sensor and Display.



1. UNBOX AND POSITION YOUR COMPONENTS

Carefully unbox the WineSentry Sensor and Display and place both inside your wine cellar.

- Sensor: place it where it can monitor the cellar environment under your preferred storage conditions. It may also join your cellar presentation, alongside a favorite bottle or featured vintage.
- Display: place it where it is easy to see. It can sit flat or tipped upright, depending on your cellar layout.



MOTION SENSOR PLACEMENT

The motion sensor is on the front of the Display. Point it in a direction that will not create unwanted motion alerts, away from places where normal activity occurs.

Once positioned:


- ① Plug in the WineSentry Display first.
 - ② Then plug in the WineSentry Sensor.
 - ③ Allow both devices about 60 seconds to power up and connect to each other.
-

↓ 2. DOWNLOAD AND SET UP THE LUXSENSE APP

Scan a QR code below to download the app, or search for LuxSense Technologies in your app store.



iOS

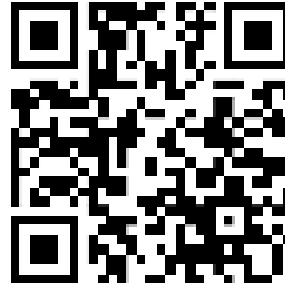

ANDROID

Once installed, open the app and:

- ① Accept all requested permissions.
- ② Enter your Registration ID, provided with your shipment and/or by email.
- ③ You will then be taken to the main menu.

📶 3. PAIR WINESENTRY TO YOUR WIFI

In the LuxSense app:

- ① Go to the Settings menu.
 - ② Follow the in-app instructions to pair your WineSentry Sensor.
 - ③ New sensors will appear as UNASSIGNED until setup is complete.
 - ④ You will need your WiFi network name and password, plus a name for your sensor, to finish setup.
-

4. INITIAL CALIBRATION

To ensure accurate performance, set up your WineSentry Sensor in your cellar under your preferred temperature and humidity conditions. WineSentry uses the initial cellar environment as its target reference.



LIGHT-LEVEL SETUP

During startup and acclimation, keep the cellar lights ON so the light-level sensor can properly establish the expected ON light condition.



CALIBRATION PERIOD

WineSentry calibrates during the first 30 minutes. We recommend leaving the Sensor undisturbed and keeping the cellar in its normal desired condition.



RE-CALIBRATION

To re-calibrate, simply unplug your WineSentry Sensor and plug it back in.



5. DAILY AND UNSCHEDULED NOTIFICATIONS



DAILY NOTIFICATIONS

Each day around 12:00 p.m., WineSentry sends a notification with the current temperature and humidity deviation readings from your cellar.



UNSCHEDULED ALERTS

If readings deviate beyond our tolerances from the target conditions for more than several minutes, WineSentry will send an unscheduled alert.



NOTIFICATION LIMIT

To prevent excessive alerts, WineSentry sends a maximum of 5 unscheduled notifications before pausing alerts for 24 hours. During the pause, the Display and any phone widgets keep updating.

6. PHONE SCREEN WIDGETS

After installing the LuxSense app, you can add our phone screen widget for a quick glance at your cellar conditions.

ANDROID PHONES

- 1 Long press the background of any screen until a popup menu appears.
- 2 Select Widgets.
- 3 Find and select the LuxSense widget.
- 4 Drag and drop it to your preferred location.

iOS PHONES

- 1 Long press the background of any screen until the Edit menu appears in the upper-left corner.
- 2 Select Edit.
- 3 Select Add Widget.
- 4 Locate the LuxSense widget.
- 5 Touch Add Widget.

Need Help?

We are here for you.

support@luxsense.tech



LuxSense WineSentry

The Guardian of Your Vinous Treasures
